



VOLVO B8R LOW ENTRY

Made to just keep running



VOLVO B8R LOW ENTRY SPECIFICATION

Overall Dimensions				
Α	Overall Chassis Length	SWP2020	10273-12573	
		SWP1920	10173-12473	
		SWP1500	9758-12058	
С	Frame Height at Rear Structure		1754	
D	Transport Wheelbase		3500	
	Approved Wheelbase		4500-6800	
G	Front Overhang	SWP2020	2600	
		SWP1920	2500	
		SWP1500	2085	
Н	Rear Overhang		3193	
S	Steering Wheel Position	SWP2020	2018	
		SWP1920	1918	
		SWP1500	1503	
I	Front Track		2068	
K	Rear Track		1834	
L	Overall Width Front Wheels or Housing		2500	
Ν	Overall width rear wheels		2436	
0	Approach angle(°) (N-Steering)		7.9	
Р	Departure angle (°)		7.7	
*) Track width, overall width and frame height are measured with tyres:			295/80R22.5	
and Steel rims:			8.25"x22.5"	


Engine	D8A330
Emission standard	Euro 3
Engine system	Common rail
Displacement (dm3)	7.7
Cylinders/arrangement	6/in-line
Output (hp)	330
Output ISO 1585 (kW)	243
Torque ISO 1585 (Nm)	1200
at engine speed (rpm)	1200-1650

Transmission and axles		
Gearboxes	ZF 6AP1200C	
Front axle	VOLVO RFS	
Rear Axle	VOLVO RS1228C	
Differential lock	Optional	

Suspensions and steering				
Air bellows, front	2			
Air bellows, drive	4			
Kneeling	Optional			
Max wheel angle	53°±1°			
Power steering	Hydraulic power steering			
Steering wheel position	LHD/RHD			

Electrical System

- Bus Electrical Architecture, BEA2+
- Electronic Data Bus System, Multiplex 3
- Ampere Meter
- Fuel Consumption Meter
- Outdoor/Indoor Temperature Meter
- Number of Batteries: 2
- Voltage: 24V
- Battery Capacity: 165Ah, 170Ah, 180Ah
 225Ah
- Alternator Max Output: 2x110A

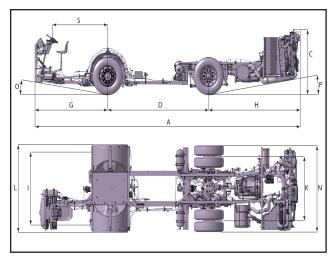

*All Measurements in mm

*All Weights in Kg

Final design to be determined by customer

Weights				
Permitted front axle load	7500			
Permitted drive axle load	12000			
Permitted GVW	19000			

Fuel tanks		
Diesel (L)	220L, 220R, 310	
Transport (L)	50	

Driver's seat and station

- · Adjustable steering wheel, tilt
 - Instrument cluster:
 - speedometer
 - rev counter
 - 6.5" display
 - fuel gaugecoolant temperature
 - brakes
 - turbo and oil pressure
 - indicators
 - warning lamps
 - Emergency switch
- Tachograph
- Radio switches in steering wheel
- Data logging
- Volvo Alcolock
- External Temperature Meter
- Fuel Economy Meter
- Engine controls in engine compartment to enable engine operation from the rear of vehicle

Air and Brake System

- Collision Warning with Emergency Brake (CW-EB)
- Volvo disc brakes
- Electronic Stability Control (ESC)
- Electronic Braking System (EBS 5)
- Anti-lock Braking System (ABS)
- Acceleration Slip Regulation (ASR)
- Brake blending
- Dual retarder control
- Drag torque control
- Hill Start Aid
- Brake temperature warning
 Dear brake performance were
- Poor brake performance warning
- Door brake
- Brake assistant
- Lining wear sensing and analysis
- Automatic calibration after brake pad change
- Compressed air system, easily filled from external circuit



